

Keyhole Piano Shells

Classical Music Stand

Use Manual



Remove decorative plugs

*hint - use knob to push plug out from below.



Screw on base in the orientation shown.



Place the backboard into position.

